

OWNERS MANUAL



**Model LPB001
Portable Blind Frame**

PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

- ⚠ The Portable Blind frame is designed for use on healthy trees or solid posts in the size range of 8" to 20" in diameter.**
- ⚠ The pin points used to secure a fabric cover to the hangers may protrude through the hanger and can snag clothing or scratch your skin if not snipped off after installation.**
- ⚠ This Portable Blind frame is intended for use at ground level. Attempts to install at greater height may result in serious injury from a fall.**

SPECIFICATIONS

The nominal 2.5 lb Le Perch Outdoors Portable Blind Frame (LPB001) is a fully shock corded fiberglass frame that mounts to any tree or post (8"-20" diameter) using the tree grip with a 1"x6' ratchet strap. The Blind Frame provides a 3' x 3' (9 sq. ft) enclosure to which any desired screen fabric can be attached using the included 8 hangers with pins. Additional hangers with pins are available as an accessory in packets of 8 each (LPB001A) for attaching additional screen fabrics allowing you to easily change your cover depending upon season or location. The Blind Frame readily disassembles by detaching it from the tree grip and disengaging the incorporated shock corded fiberglass rails; folding into a nominal 5" dia x22" bundle secured with included hook & loop strap that stores and transports in the included shoulder pouch.

SETUP AND USE

Your Le Perch Outdoors Portable Blind Frame is assembled by unfolding the frame bundle and engaging the corded fiberglass rods into the adjacent connectors. Firmly secure the tree grip using the attached 1" x 6' ratchet strap at the desired height on the tree or post (50" is suggested). Engage the fiberglass rods into the tree grip connectors. Raise the perimeter frame portion and set the front legs to a nominal vertical position. Drape your screen fabric onto the

standing frame using the supplied hangers. **NOTE: While it is possible to attach the hangers to the screen fabric using the supplied pins in the field, it is strongly recommended this be done beforehand.**

Hanger attachment to screen Fabric

1. Press a push pin through the face of your screen fabric at the desired location. It is recommended that you place a hanger near each end (1"- 2" from each end is suggested) and distribute the remaining 6 hangers uniformly using 2 for each side and front. It is also suggested that you insert the push pins a minimum of 2" from the top of your screen fabric. This allows the screen fabric to extend above the 'hook' and hide the frame.
2. Place a hanger with the 'hook' facing down on a block of scrap wood or similar solid material such that the 'hook' is suspended.
3. Place the protruding pin point into the tiny hole in the body of the hanger and press firmly until the face of the pin grips the screen fabric. Caution: the point of the pin when fully pressed will likely protrude beyond the body of the hanger. It is recommended that you use a wire cutter or similar tool to clip as close to the hanger body as possible to avoid scratches while handling the screen fabric.



Parts

- 1 each; 3'x3' shock corded fiberglass frame with attached 3 segment shock corded fiberglass legs
- 1 each; tree grip with 1"x6' ratchet strap
- 1 each; ½"x15" Velcro^R bundle strap
- 1 each; packet of 8 hangers and 8 push pins
- 1 each; shoulder pouch

ACCESSORIES **(available separately)**

Replacement packet of 8 hangers and 8 push pins—LPB001A

Warranty

Le Perch Outdoors, LLC warrants as limited herein to the original purchaser of retail that each new Canopy, shall be free of defects in material and workmanship for a period of one (1) year from date of original purchase.

In the event of malfunction or failure of your Le Perch Outdoors Canopy, simply send the complete unit, postage paid along with PROOF OF PURCHASE, within the warranty period of one (1) year, to: Le Perch Outdoors, LLC, 8406 Lylwood Ct., Chesterfield, VA 23838. Le Perch Outdoors, LLC reserves the right to inspect the claimed defective part(s) to determine if the defect or malfunction complaint is covered by this warranty. Le Perch Outdoors, LLC shall within sixty (60) days of receipt of the product, at its option, repair and/or replace the defective part(s) free of charge. This warranty shall only cover defects arising from normal usage. Le Perch Outdoors, LLC assumes no responsibility whatsoever if the Canopy should fail during the warranty period by reason of

- Misuse, negligence, physical damage or accidents.
- Repair by an unauthorized party during the warranty period.

Le Perch Outdoors, LLC makes no further warranties or representations, expressed or implied except those contained herein. Le Perch Outdoors, LLC shall in no event be liable for direct, indirect, special or consequential damages