

## Le Perch Outdoors

### OWNERS MANUAL



model TCB101

#### Trackchair® Adjustable Blind



**BE SURE THE BLIND LEG FEET ARE FULLY INSERTED INTO THE RECEIVER CUPS ON THE FOOT RAIL BEFORE MOVING THE CHAIR. ADJUST THE RECEIVER CUPS POSITIONS TO ENSURE THE BLIND LEGS ARE NOT BOWED WHEN THE FEET ARE INSERTED INTO THE RECEIVER CUPS**



**BE SURE THE BLIND CURTAIN SIDES ARE RAISED ABOVE AND CLEAR OF THE CHAIR TRACKS AND SECURED BEFORE MOVING THE CHAIR**



**THE POINTS OF THE PINS USED TO SECURE THE SIDE HANGERS TO THE BLIND CURTAIN MAY PROTRUDE THROUGH THE HANGER AND CAN SNAG CLOTHING OR SCRATCH YOUR SKIN IF NOT CLIPPED UPON INSTALLATION**

#### PARTS/SPECIFICATIONS

1 each: fully shock corded 42" x 38" frame of 3/8" diameter fiberglass tubing with integrated adjustable height legs

1 each: 34" x 3/8" diameter foot rail

2 each: receiver cups

2 each: mounting T's with 1/4"-20 x 1" button head bolt and 2 fender washers

1 each: 3/4" square x 18" powder coated flat black support tube

1 each: 1" square x 4 1/4" powder coated flat black T grip

1 each: 11' x 45" camo printed burlap curtain

8 each: hangers with attachment pins

1 each: 5/8" hook & loop bundle strap

1 each: storage pouch with carry strap

## SETUP AND USE

After unpacking all pieces, slide the T grip over the  $\frac{3}{4}$ " square x18" support tube and temporarily lock in place approximately midway by tightening the thumb screw. [If the blind is intended to be used in conjunction with the Le Perch Outdoors canopy accessory, slide the T grip for the blind over the  $\frac{3}{4}$ " square x 36" canopy support tube and temporarily lock in place approximately 6" above the knee of the support tube.] Insert either support tube into the 1" square receiver on the Trackchair® seat frame and lock in place by tightening the thumb screw. (Figure 1) Note the T grip can face either forward or rearward depending upon seat clearance or personal preference. Since the length of the Trackchair® receivers vary in length; be sure at least 1  $\frac{1}{2}$ " of the support tube is inserted into the receiver before locking in position with the Trackchair® receiver thumb screw.

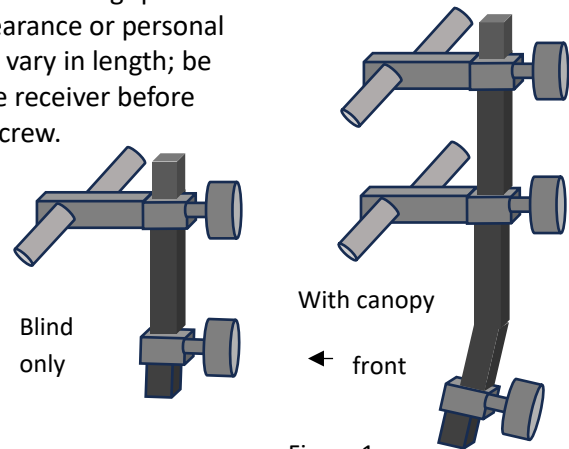


Figure 1

The 34" long foot rail is supplied with a pair of mounting T's and a pair of receiver cups that may be repositioned as needed by simply loosening the thumb screws and sliding along the rail and relocking in the desired location by retightening the thumb screws. Remove the  $\frac{1}{4}$ -20 button head screws and fender washers from the mounting T's using a 5/32 Allen wrench. Attach the footrail to the Trackchair® footrest by placing a fender washer on either side of an appropriate hole in the expanded metal mesh near the front of the footrest, inserting the buttonhead screw through the fender washers and threading it into the mounting T. (see Figure 2). Repeat with the second mounting T making sure the footrest holes selected allow the footrail to align parallel with the front of the footrest as seen in Figures 3 or 4. Note it is preferred that the footrail be mounted below the Trackchair® footrest. Some Trackchair® units are equipped with accessories that require the footrail to be mounted above the footrest using the same procedure. Slide the footrail to locate it equally on either side beyond the footrest and lock in place by tightening the mounting T thumb screws.

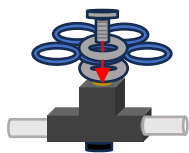


Figure 2

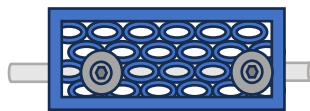 


Figure 3



Figure 4

Your Le Perch Outdoors Trackchair® blind frame is assembled by unfolding the frame bundle and engaging all of the shock corded fiberglass tube segments into their adjacent connectors. Snap the leg braces extending from the 'Y' couplings onto the horizontal rail as shown in Figure 5.



Figure 5

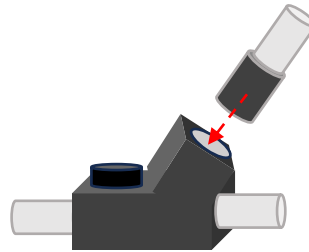


Figure 6

With the blind frame in front of the chair, take the rear segments of the horizontal frame portion and insert the ends into the couplings of the T grip. Position the two receiver cups where the frame legs will intersect with the footrail and lock with the thumb screws. Lift the frame and insert the foot ends of the frame legs into the receiver cups. (Figure 6). The height of the front rail of the blind frame is adjustable over 5 increments. The frame as received is set to the lowest height. (see Figure 7) To increase the height of the front rail remove the thumb screw from each lower leg and slide bottom of the legs outward until the brass thread insert is visible in the desired hole of each lower leg. Thread the thumb screws into the brass inserts and tighten. Note each hole in the lower leg increments the front rail height approximately 1". Note also that raising the front rail height increases the leg length which increases the separation width of the leg ends. This will require relocation of the receiver cups on the footrail. Loosen the thumb screw of each receiver cup, slide the cup to the new intersection point, and retighten the thumb screw to lock the position.



Figure 7

Final adjustment of the blind frame position may be made by relocating the T grip position on the support tube. Loosen the thumb screw and slide the T grip to the desired location and lock by retightening the thumb screw. Note the side rails of the frame need not be level.

Unfold the camo printed burlap curtain and affix to the horizontal portion of the blind frame using the hook & loop strips front and rear and the upper plastic hangers on the sides. For moving your Trackchair® with the curtain attached raise both sides of the curtain and hook the lower plastic hangers onto the side horizontal rails of the frame. Make sure the curtain is clear of the chair tracks before initiating chair movement.

To access the chair seat with the blind frame attached (with or without the curtain), simply raise the frame swinging the legs forward while lifting. Once seated, lower the frame and reinsert the frame legs into the receiver cups on the footrail.

## **Warranty**

Le Perch Outdoors, LLC warrants as limited herein to the original purchaser of retail that each new Trackchair® Adjustable Blind, shall be free of defects in material and workmanship for a period of one (1) year from date of original purchase.

In the event of malfunction or failure of your Le Perch Outdoors Trackchair® Adjustable Blind, simply send the complete unit, postage paid along with PROOF OF PURCHASE, within the warranty period of one (1) year, to: Le Perch Outdoors, LLC, 8406 Lylwood Ct., Chesterfield, VA 23838. Le Perch Outdoors, LLC reserves the right to inspect the claimed defective part(s) to determine if the defect or malfunction complaint is covered by this warranty. Le Perch Outdoors, LLC shall within sixty (60) days of receipt of the product, at its option, repair and/or replace the defective part(s) free of charge. This warranty shall only cover defects arising from normal usage. Le Perch Outdoors, LLC assumes no responsibility whatsoever if the Blind Frame should fail during the warranty period by reason of

- Misuse, negligence, physical damage or accidents.
- Repair by an unauthorized party during the warranty period.

Le Perch Outdoors, LLC makes no further warranties or representations, expressed or implied except those contained herein. Le Perch Outdoors, LLC shall in no event be liable for direct, indirect, special or consequential damages

**Le Perch Outdoors, Chesterfield, Virginia 23838 (804) 930-4415 [www.leperchoutdoors.com](http://www.leperchoutdoors.com)**